



WOOLY MAMMOTH

with Grom

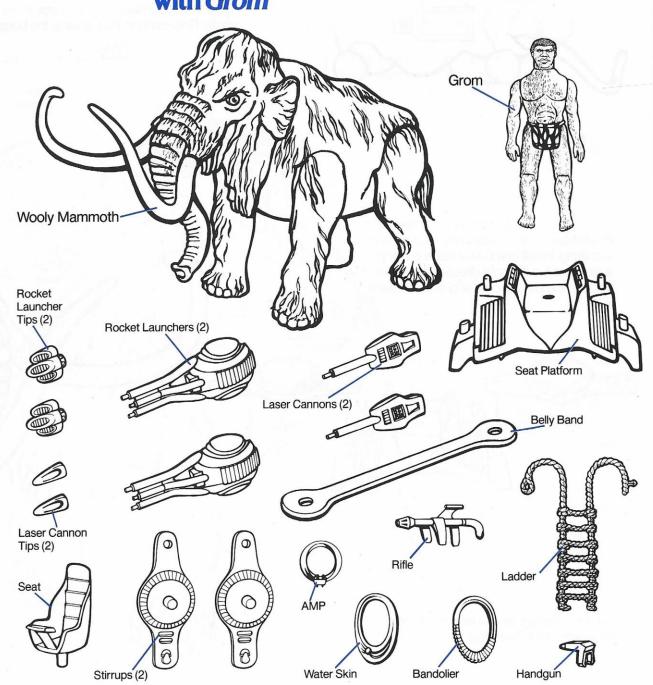

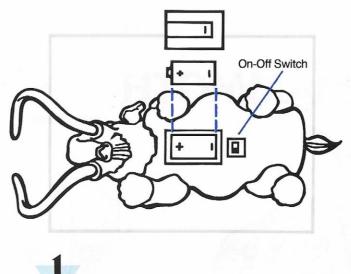





Place the Seat Platform on the back of the Wooly elastic Belly Band to the hooks at the bottom of th






Open the battery door on the underside of the Wooly Mammoth by sliding the latch forward and lifting. Install one C-size battery, being sure to put it in the right direction as shown. Replace the battery door and slide the latch shut.

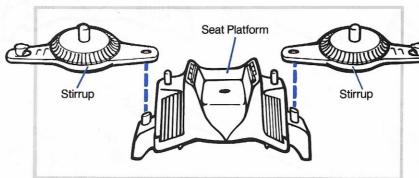

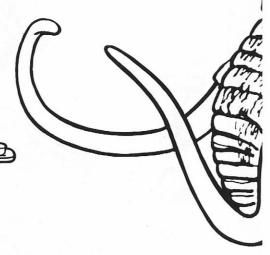


Hang the Stirrups on the large pegs on each side of the Seat Platform.

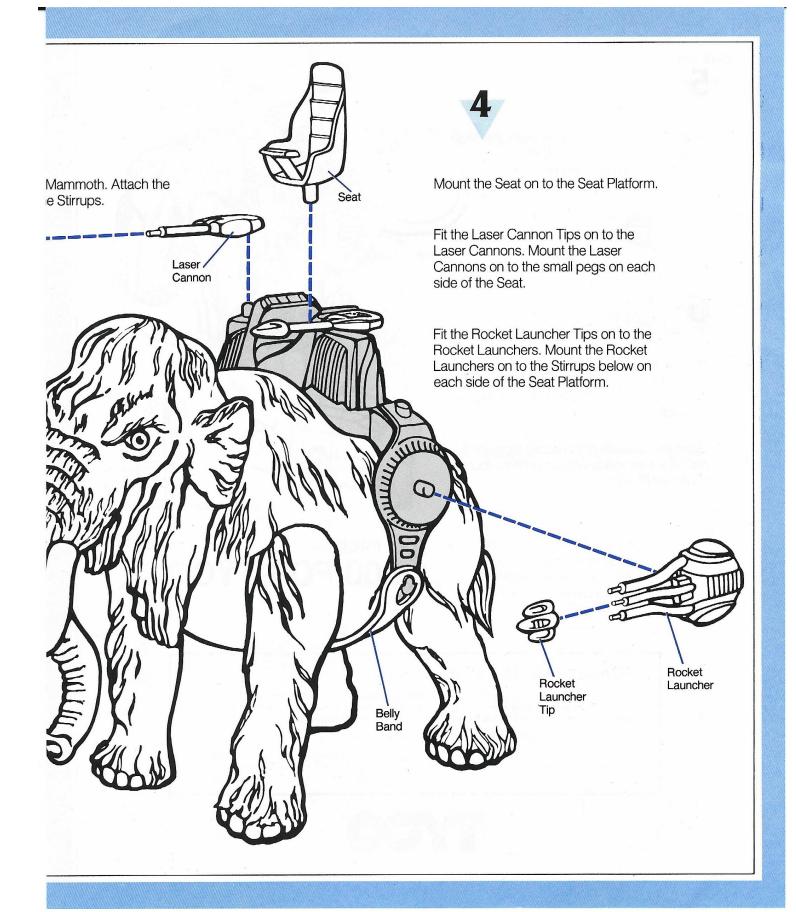

5


The On-Off switch is located under the body. Switch it "on" and the Wooly Mammoth will walk forward to battle the Rulons.

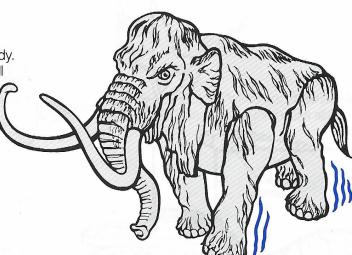

6

The rifle and handgun clip on Grom's arm. The water skin and bandolier are worn over each shoulder. The AMP unit is worn around his neck.

Snap the top ends of the ladder together. It will hook over various objects to help your Dino-Riders climb.

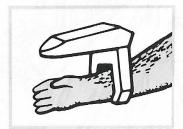



If you have any comments or questions about your Tyco Dino-Rider playsets, please call us.

1-800-FOR-TYCO

TYCO Dino-Riders 90-Day Limited Warranty

All Tyco products are thoroughly inspected and tested before shipment and guaranteed to be free from factory defects in materials or workmanship. If you find a defective part in your set — within 90 days of the date of purchase mail the product along with the proof of the date of purchase to:

TYCO CUSTOMER SERVICE, 540 Glen Avenue, Moorestown, NJ 08057

We will repair or provide a replacement part or unit without charge. To prevent damage in transit, please pack securely. This warranty does not cover damage resulting from accident, misuse or abuse. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

© Tyco Industries, Inc. Moorestown, NJ 08057



PRINTED IN HONG KONG 1989 97-8-201